

# Installation Manual -Antique Bronze Brass Knurled Door Pull






Applicable door thickness: Glass door: 8-22mm,Hole dia.:10mm. Wooden door: 13-42mm,Hole dia.:6mm.

#### Installation Instructions - Single Pull

Points 2, 3, 7, 8, 9 and 10 is for a glass door. Points 7, 8 and 9 is for a wooden/cabinet door.

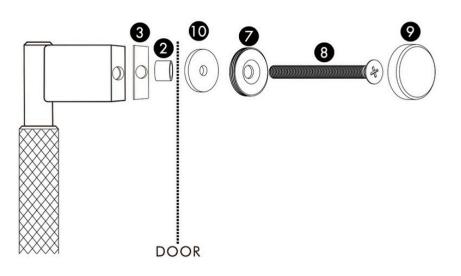




#### Applicable door thickness:

Glass door: 5-20mm, Hole dia.:10mm. Wooden door: 11-25mm, Hole dia.:6mm. Wooden door:40-58mm, Hole dia.:8mm.

### Installation Instructions - Double Pull


Points 2, 3, 4, 5 and 6 is for a glass door. Points 4, 5 and 6 is for a 11-25mm wooden door. Points 1, 4, 5 and 6 is for 40-58mm wooden door.

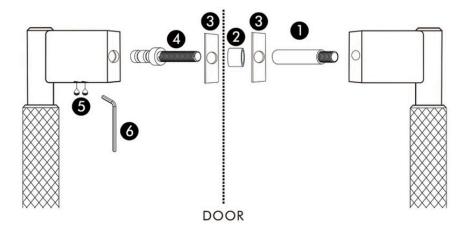



## Antique Bronze Brass Knurled Door Pull (Single - Sided)



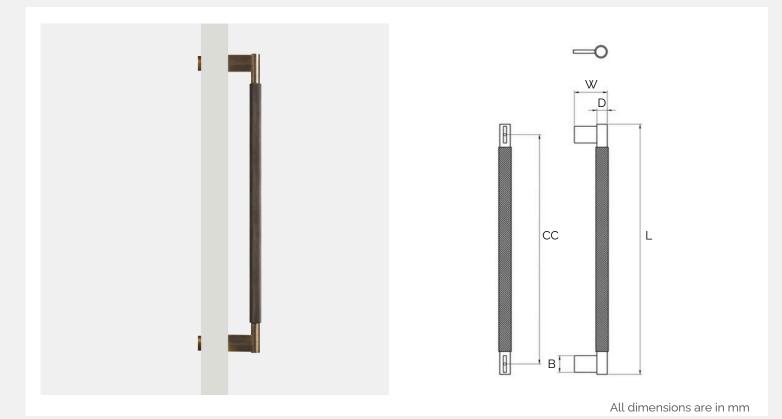

\*Sizes provided are nominal and intended as a guide\*


CC L Н D В (Length) (Centre-to-Centre) (Height) (Diameter) (Base) DAP-001-S300-AB 60 28 300 270 20

DAP-001-S450-AB	450	420	60	20	28
DAP-001-S600-AB	600	570	60	20	28

Inclusions:

SKU

• x2 units of the following:

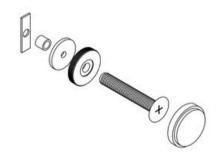

• Allen key








### Antique Bronze Brass Knurled Pull (Double - Sided)



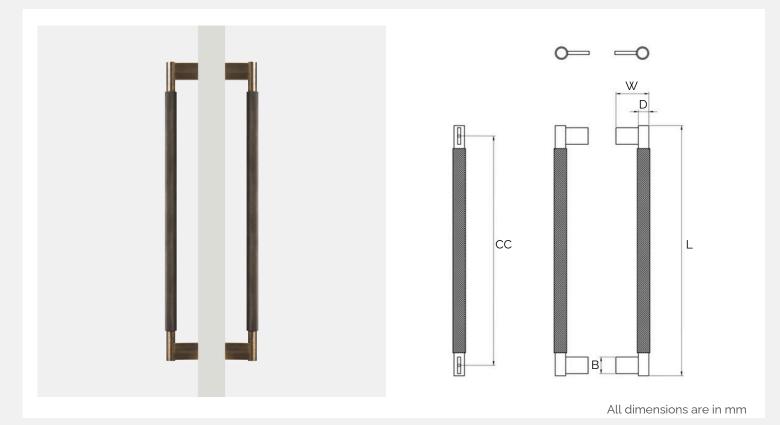


\*Sizes provided are nominal and intended as a guide\*

SKU CC L Н D В (Centre-to-Centre) (Height) (Length) (Diameter) (Base) DAP-001-D300-AB 60 28 300 270 20 DAP-001-D450-AB 60 28 450 420 20 DAP-001-D600-AB 600 28 570 60 20

Inclusions:

• x2 units of the following:

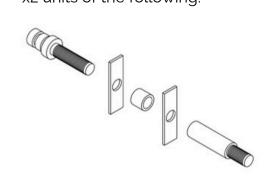

• Allen key



\*Product Care : Wipe and clean with a damp cloth and do not use any cleaning agents or chemicals.\*