


## Installation Manual - Matte Brass Linear Knurled Door Pull

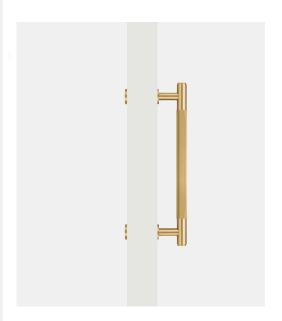





#### Applicable door thickness:

Wooden door: 13-42mm,Hole dia.:6mm. Wooden door: 43-70mm,Hole dia.:8mm.

## **Installation Instructions - Single Pull**

Points 6, 7 and 8 is for a wooden/cabinet door.

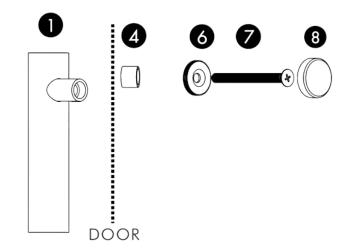

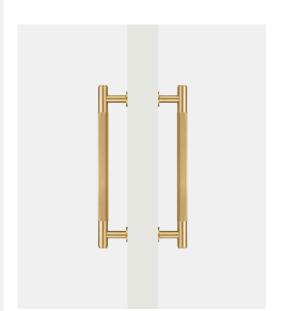


### Applicable door thickness:

Wooden door: 8-30mm,Hole dia.:6mm. Wooden door: 35-63mm,Hole dia.:8mm.

### Installation Instructions - Double Pull


Points 1, 2 and 8 is for a 8-30mm wooden door. Points 1, 2, 6 and 8 is for 35-63mm wooden door.

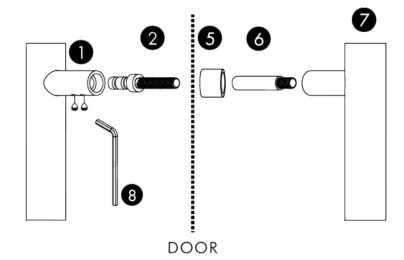




# Matte Brass Linear Knurled Door Pull (Single - Sided)



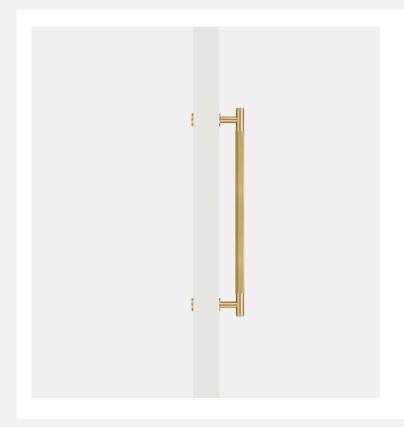

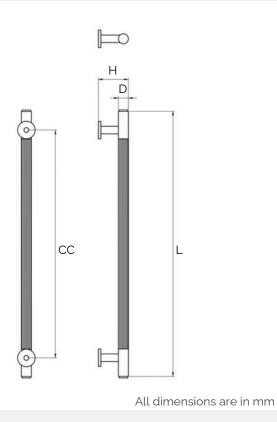


\*Sizes provided are nominal and intended as a guide\*

SKU	<b>L</b> (Length)	<b>CC</b> (Centre-to-Centre)	<b>H</b> (Height)	<b>D</b> (Base)
DAP-005-S300-MBR	300	250	53	20
DAP-005-S450-MBR	450	385	53	20

## Inclusions:

• x2 units of the following:

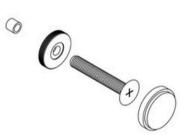

• Allen key









# Matte Brass Linear Knurled Door Pull (Double - Sided)



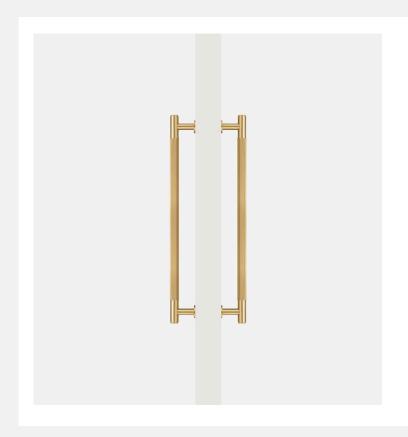

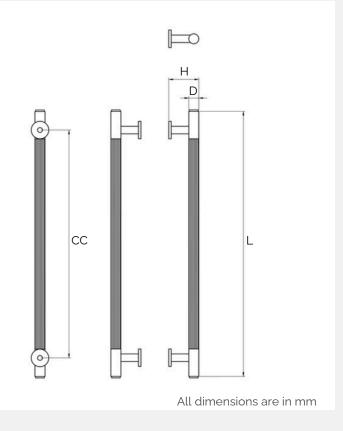

<sup>\*</sup>Sizes provided are nominal and intended as a guide\*

SKU	<b>L</b> (Length)	<b>CC</b> (Centre-to-Centre)	<b>H</b> (Height)	<b>D</b> (Base)
DAP-005-D300-MBR	300	250	53	20
DAP-005-D450-MBR	450	384	53	20

## Inclusions:

• x2 units of the following:





• Allen key



