





Installation Manual - Matte Black Brass Linear Knurled Door Pull



Installation Instructions - Single Pull

Points 6, 7 and 8 is for a wooden/cabinet door.

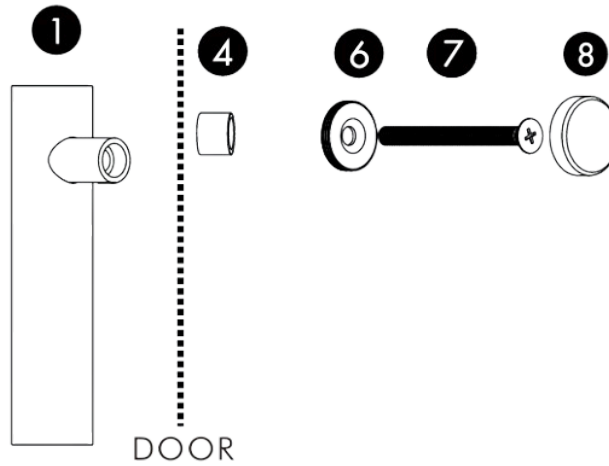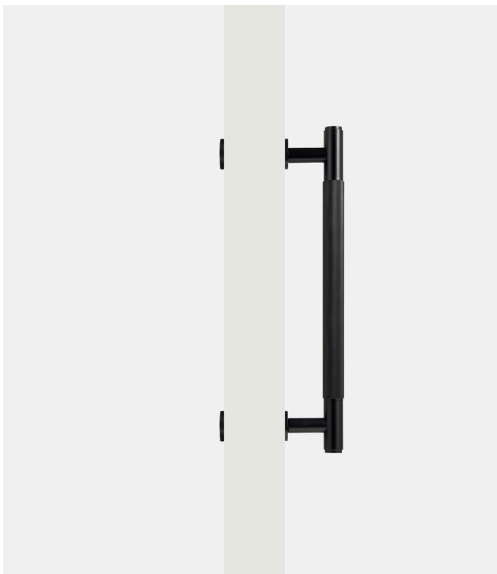

Applicable door thickness:



Wooden door: 13-42mm, Hole dia.: 6mm.

Wooden door: 43-70mm, Hole dia.: 8mm.

Installation Instructions - Double Pull

Points 1, 2 and 8 is for a 8-30mm wooden door.

Points 1, 2, 6 and 8 is for 35-63mm wooden door.

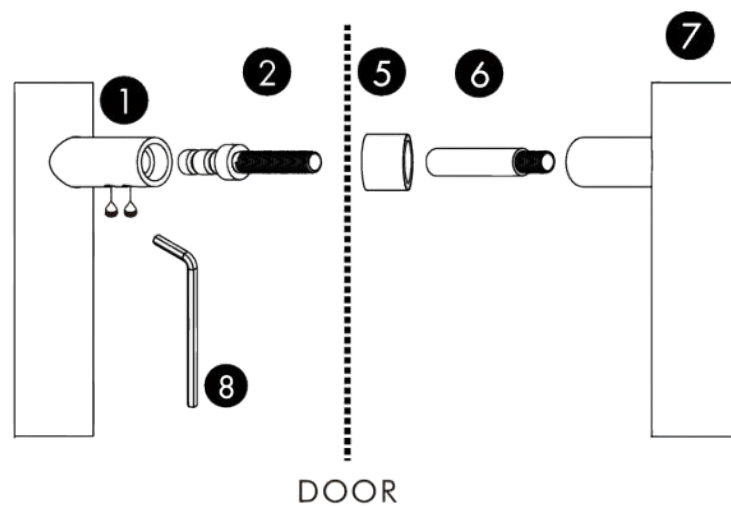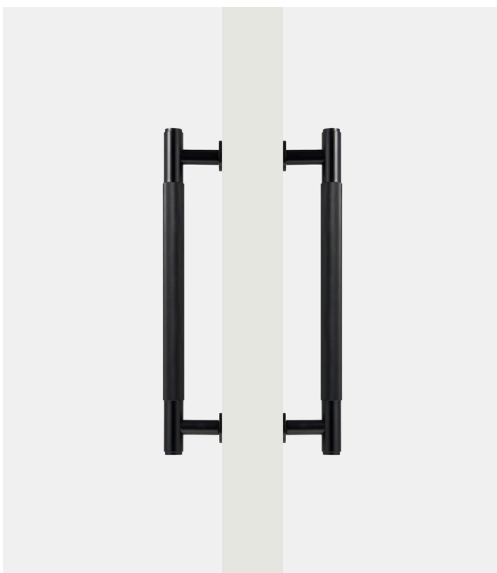



Applicable door thickness:

Wooden door: 8-30mm, Hole dia.: 6mm.

Wooden door: 35-63mm, Hole dia.: 8mm.



Matte Black Brass Linear Knurled Door Pull (Single - Sided)

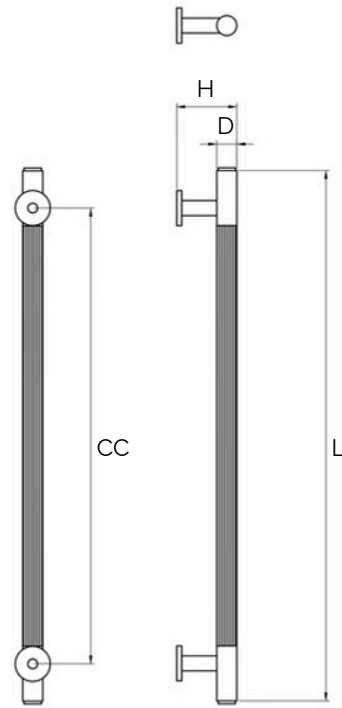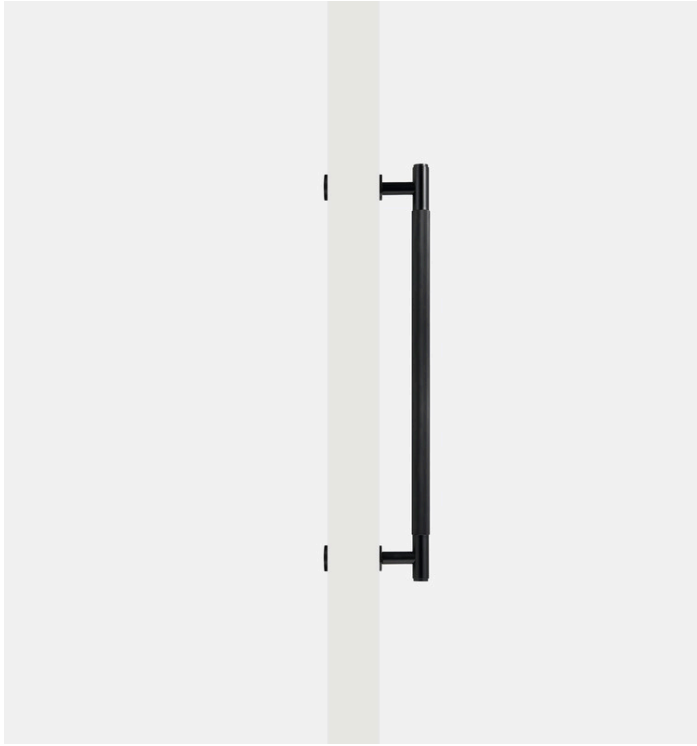



All dimensions are in mm

Sizes provided are nominal and intended as a guide

SKU	L (Length)	CC (Centre-to-Centre)	H (Height)	D (Base)
DAP-005-S300-MB	300	250	53	20
DAP-005-S450-MB	450	385	53	20

Inclusions:

- x2 units of the following:
- Allen key

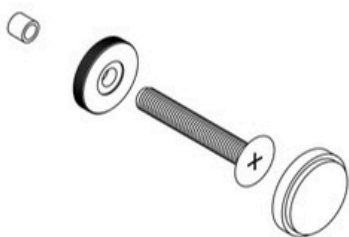



Product Care : Wipe and clean with a damp cloth and do not use any cleaning agents or chemicals.



WARRANTY



Matte Black Brass Linear Knurled Door Pull (Double - Sided)

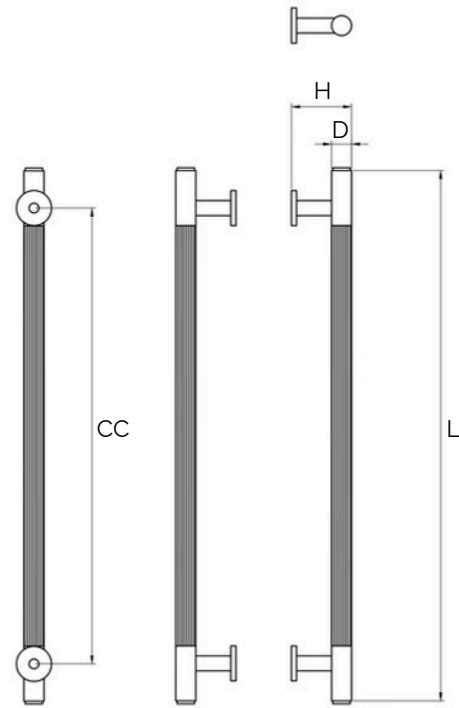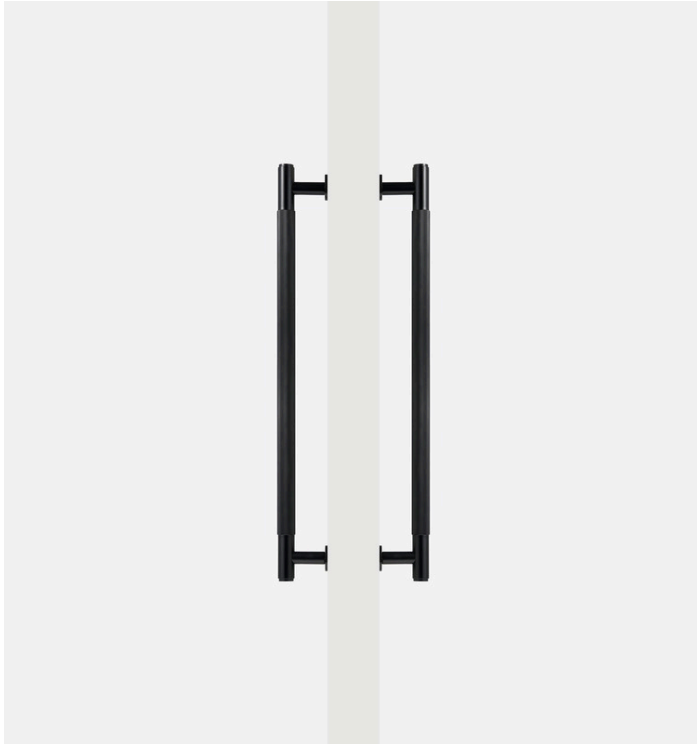



All dimensions are in mm

Sizes provided are nominal and intended as a guide

SKU	L (Length)	CC (Centre-to-Centre)	H (Height)	D (Base)
DAP-005-D300-MB	300	250	53	20
DAP-005-D450-MB	450	384	53	20

Inclusions:

- x2 units of the following:
- Allen key

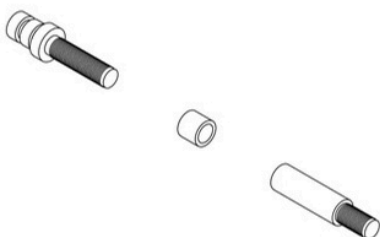

Product Care : Wipe and clean with a damp cloth and do not use any cleaning agents or chemicals.



WARRANTY